



RHT-2301, Air Temperature/ Humidity Sensor

Quick Reference Guide
SD-423/42016



MOUNTING INSTRUCTIONS

1



#8 Machine Screw



Mount to a solid structure within 10 ft. of the refrigerated case, away from heat or cold sources.

WIRING INSTRUCTIONS

2

Ensure power is removed from the controller.
3-1/2-in.-lbs. maximum torque on all screw terminals.

